
Physical instructions for installation / Wave Control unit

Affixing the sensor to the ceiling: distance from heater frame 100–400 mm

The temperature sensor should be installed no less than 1000 mm from an undirected air vent income, or less than 500 mm from a directed air vent.

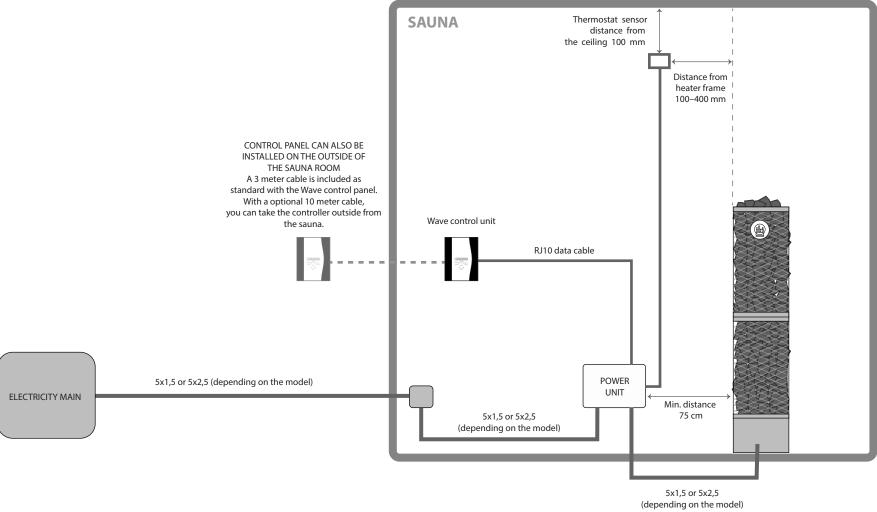

KIUKAISTA KIUKAIN